



# DNH<sup>AS</sup>

**N-3770 Kragerø  
NORWAY**  
 Phone: ..... (47) 35 98 56 00  
 Fax: ..... (47) 35 98 56 10  
 E-mail: ..... dnh@dnh.no  
 Web-site: ..... [www.dnh.no](http://www.dnh.no)



**DNH WW Ltd.  
England**  
 Phone:.....(44) 1908 275 000  
 Fax:.....(44) 1908 275 100  
 E-mail:.....dnh@dnh.co.uk

**DNH GmbH  
Germany**  
 Phone:.....(49) 040 6569 30-0  
 Fax:.....(49) 040 6569 30-30  
 E-mail:.....dnh@dnh.de

**DNH  
Speakers Inc.  
USA**  
 Phone:.....(1) 484 494 5790  
 Fax:.....(1) 484 494 5793  
 E-mail:.....dnh@dnhspeakers.com

ISO 9001 CERTIFIED

## CAP-15W(T)

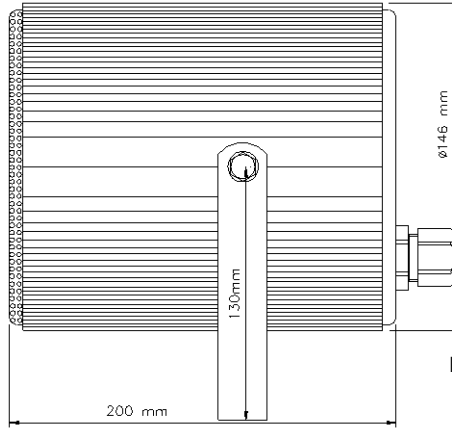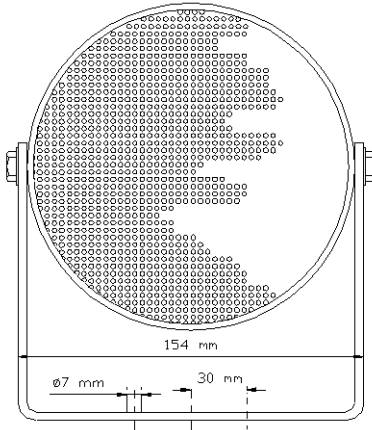

M20  
cablegland  
5 – 12 mm

PA plastic lid

Transformer:  
 Combined  
 70/100 V line  
 5(White) : 7(Green) 70V  
 5(White) : 8(Red) 100V

Secondary nominal tappings:  
 C : 15 15,0 W  
 C : 10 10,0 W  
 C : 5 5,0 W  
 C : 1 1,5 W

SPL at different frequencies at 1W/1m Sine wave



Material / Colour (Aluminium/PA) / RAL9010 or anodized  
 Mounting..... Bracket  
 Termination..... inside chamber  
 Weight ..... 2,1 kg  
 IP-rating..... 55  
 Max. / min. amb. temp ..... 90°C / -40°C  
 Rated / max. power..... 15 W / 20 W  
 SPL 1W/1m ..... 92 dB  
 SPL rated power..... 103 dB  
 Effective freq. range..... 150 – 20000 Hz  
 Dispersion (-6dB) 1kHz / 4kHz..... 130° / 50°  
 Directivity factor, Q..... 15,8  
 Options..... Impedances, colors, labels

### Installation, Operation and Maintenance Procedures

- When mounting the loudspeaker please ensure that it is re-assembled in the same manner in which it was received. Fasten bracket with 1-3 screws.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- It is recommended that the loudspeaker is mounted in such a position so that the front is pointing slightly downwards.
- Tighten the bracket screws on cabinet and make sure that the cable gland is tightened.
- This loudspeaker is supplied with a 2 years warranty against defective workmanship.