



DNH^{AS}

**N-3770 Kragerø
NORWAY**
 Phone:.....(47) 35 98 56 00
 Fax:.....(47) 35 98 56 10
 E-mail:.....dnh@dnh.no
 Web-site: www.dnh.no


ISO 9001 CERTIFIED

DNH Speakers Inc. USA
 Phone:...(1) 484 494 5790
 Fax:.....(1) 484 494 5793
 E-mail:..dnh@dnhspeakers.com

DNH WW Ltd. England
 Phone:....(44) 1908 275 000
 Fax:.....(44) 1908 275 100
 E-mail:.....dnh@dnh.co.uk

DNH GmbH Germany
 Phone:....(49) 040 6569 30-0
 Fax:.....(49) 040 6569 30-30
 E-mail:.....dnh@dnh.de

CL-15(T)

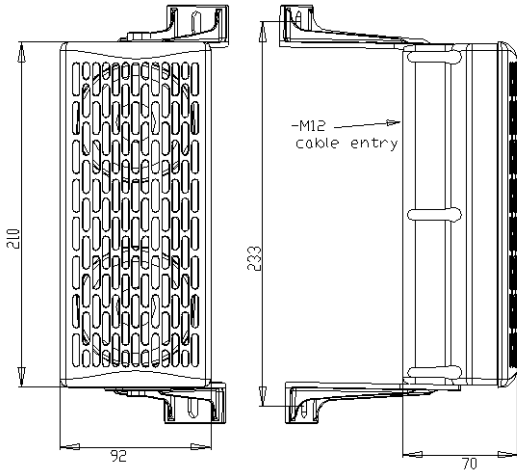

All outside screws in stainless steel.


100 Volt Transformer

Primary nominal tapings:

1 : 2	:	15,0 W
2 : 3	:	7,5 W
3 : 4	:	3,5 W
1 : 3	:	2,7 W
2 : 4	:	1,3 W
1 : 4	:	0,8 W

1 = Red, 2 = Yellow,
 3 = Green, 4 = Blue

Sound pressure levels at different frequencies at 1W/1m
 sine wave.

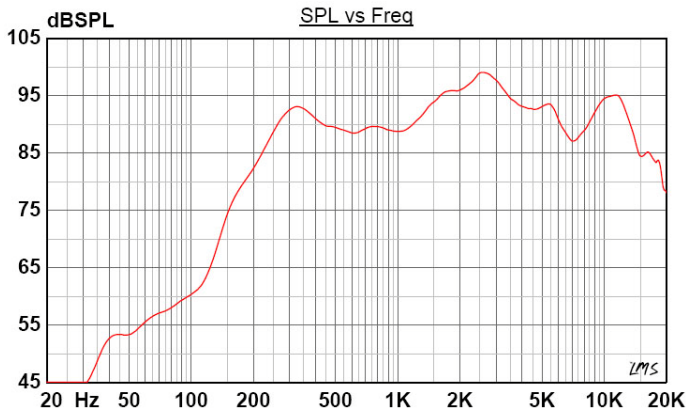

Material / ColorPP Vo / Black or White
 Mounting..... 2 x Plastic Bracket
 Termination..... 0,5m Cable
 Weight 1,00 kg
 IP-rating.....53
 Max. / min. amb. temp 90°C / - 40°C
 Standard version 4 Ω
 Rated / max. power 15 W / 20 W
 SPL 1W/1m 93 dB
 SPL rated power 103 dB
 Effective freq. range..... 180 – 20000 Hz
 Dispersion(-6dB)1kHz/4kHz.... 120°/33°&180°/120° Hor/Vert
 Directivity factor, Q
 Options Impedance, color, label

Installation, Operation and Maintenance Procedures

- To mount, slide two M6 screws in slot and fasten the bracket with two screws. Slide bracket to wanted position and tighten screws.
- This loudspeaker fits into light systems delivered from LMT, Fischer, NORKA etc.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do not open loudspeaker when energized.
- This loudspeaker is supplied with a 2 year warranty against defective materials and workmanship.