



ISO 9001 CERTIFIED

# DNH<sup>AS</sup>

**N-3770 Kragerø  
NORWAY**  
Phone:.....(47) 35 98 56 00  
Fax:.....(47) 35 98 56 10  
E-mail:.....dnh@dnh.no  
Web-site: ..... [www.dnh.no](http://www.dnh.no)

**DNH WW Ltd.  
England**

Phone:.....(44) 1908 275 000  
Fax:.....(44) 1908 275 100  
E-mail:.....dnh@dnh.co.uk


**DNH GmbH  
Germany**

Phone:.....(49) 040 6569 30-0  
Fax:.....(49) 040 6569 30-30  
E-mail:.....dnh@dnh.de

**DNH  
Speakers Inc.  
USA**

Phone:.....(1) 484 494 5790  
Fax:.....(1) 484 494 5793  
E-mail:.....dnh@dnhspeakers.com


## TRIC-6

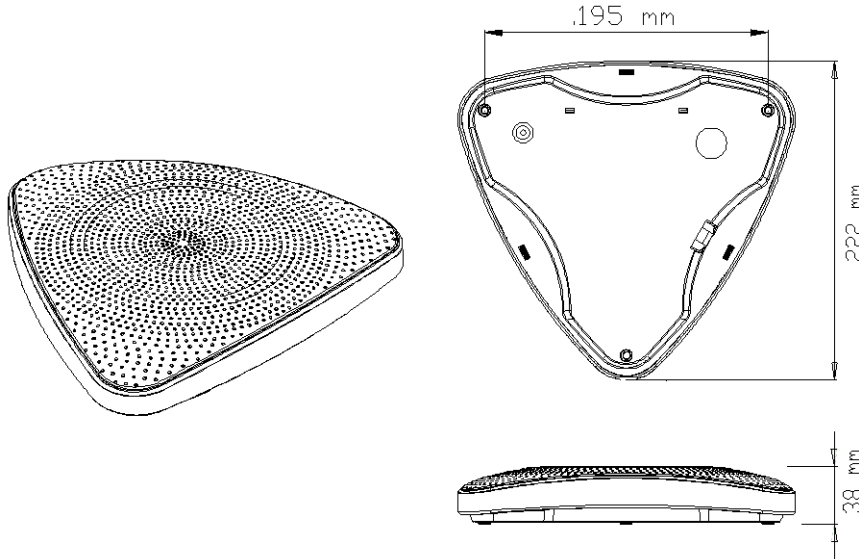

Primary nominal  
tappings:  
100Volt line

Black : Brown      6,0 W  
Black : Orange     3,0 W  
Black : Yellow     1,5 W  
Black : Green      0,5 W

SPL at different frequencies at 1W/1m Sine wave

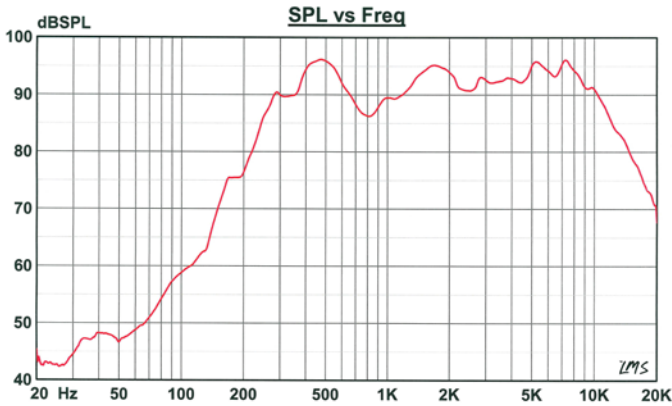

Material / Color .....ABS / RAL 9010  
Mounting.....3 screws  
Termination..... Internal screw terminals  
Weight..... 0,8 kg  
IP-rating.....  
Max. / min. amb. temp ..... 90 °C / -20 °C  
Standard version..... 100 V transformer  
Rated / max. power ..... 6 W / 10 W  
SPL 1W/1m ..... 88 dB  
SPL rated power ..... 96 dB  
Effective freq. range.....180 – 18000 Hz  
Dispersion vertical (-6dB) 1kHz / 4kHz ..... 180° / 110°  
Options ..... Impedance, color, label

### Installation, Operation and Maintenance Procedures

- To open the loudspeaker, press the clip on each side of the loudspeaker and separate the cabinet from the chassis.
- Enter the cable trough a suitable cable entrance.
- Fasten the chassis to the wall or roof with 3 screws.
- Clip the cabinet on to the chassis after termination.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do not open loudspeaker when energized.
- This loudspeaker is supplied with a 2 year warranty against defective workmanship.

