



# DNH

HEAD OFFICE, NORWAY

**DNH AS**

Phone..... + 47 35 98 56 00

Fax..... + 47 35 98 56 10

E-mail..... dnh@dnh.no

Web-site..... www.dnh.no

ENGLAND

**DNH WW Ltd**

Phone..... + 44 1908 275 000

Fax..... + 44 1908 275 100

E-mail..... dnh@dnh.co.uk

GERMANY

**DNH GmbH**

Phone... + 49 040 6569 30-0

Fax..... + 49 040 6569 30-30

E-mail..... dnh@dnh.de

USA

**DNH Speakers Inc**



Phone..... + 1 484 494 5790

Fax..... + 1 484 494 5793

E-mail..... dnh@dnhspeakers.com

## CAR-4(T)

ISO 9001 CERTIFIED

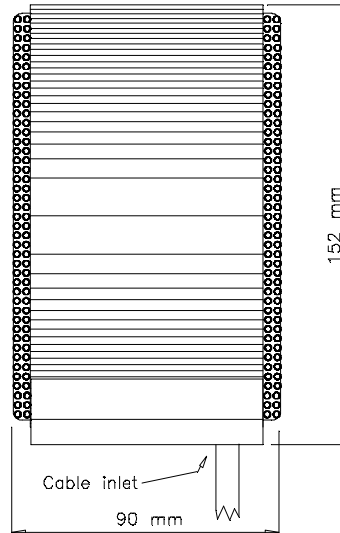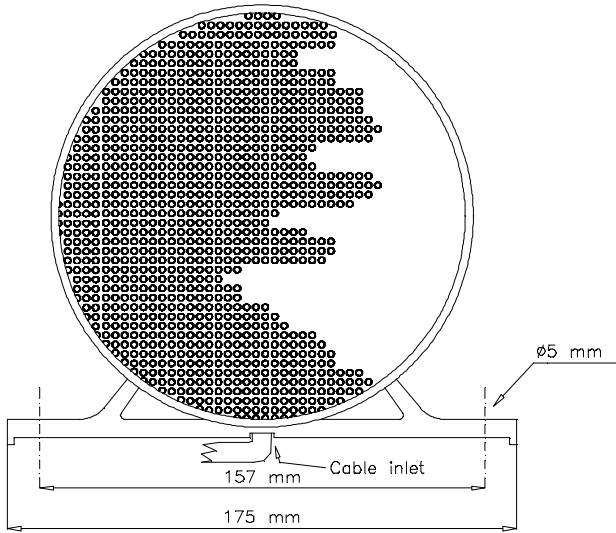


Transformer:  
100 Volt line

Primary nominal tapings:

Black : Red	4,0 W
Black : Yellow	2,0 W
Black : Green	1,0 W
Black : Blue	0,5 W

Sound pressure levels at different frequencies at 1W/1m  
With P5/15T

SPL vs Freq

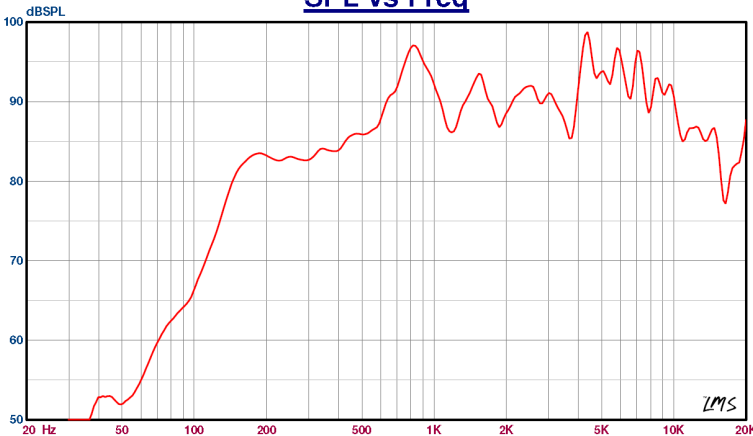

Material / Colour.... Aluminum / RAL9010 or Anodized  
 Mounting ..... Foot bracket  
 Termination ..... Cable, 1m  
 Weight w/transformer ..... 1,3 kg  
 IP-rating .....  
 Max. / min. amb. temp ..... 90°C / -40°C  
 Rated / max. power ..... 4 W / 6 W  
 SPL 1W/1m..... 90 dB  
 SPL rated power ..... 96 dB  
 Effective freq. range ..... 150 – 20000 Hz  
 Dispersion (-6dB) 1kHz / 4kHz ..... 360° / 50°  
 Directivity factor, Q .....  
 Options ..... Impedances, colors, labels

### Installation, Operation and Maintenance Procedures

- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- This loudspeaker is supplied with a 2 year warranty against defective workmanship.
- Fasten bracket with screws and terminate cable to a suitable junction box.



DNH reserves the right to alter specifications without notice

Rev. 14.10.2011