



# DNH

HEAD OFFICE, NORWAY  
DNH AS

Phone..... + 47 35 98 56 00  
Fax..... + 47 35 98 56 10  
E-mail..... dnh@dnh.no  
Web-Site..... www.dnh.no

ENGLAND

DNH WW Ltd

Phone..... + 44 1908 275 000  
Fax..... + 44 1908 275 100  
E-mail..... dnh@dnh.co.uk

GERMANY

DNH GmbH

Phone... + 49 040 6569 30-0  
Fax..... + 49 040 6569 30-30  
E-mail..... dnh@dnh.de




USA

DNH Speakers Inc

Phone..... + 1 484 494 5790  
Fax..... + 1 484 494 5793  
E-mail..... dnh@dnhspeakers.com

ISO 9001 CERTIFIED

## CAR-6(T)

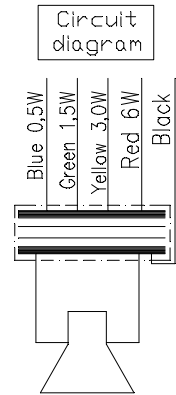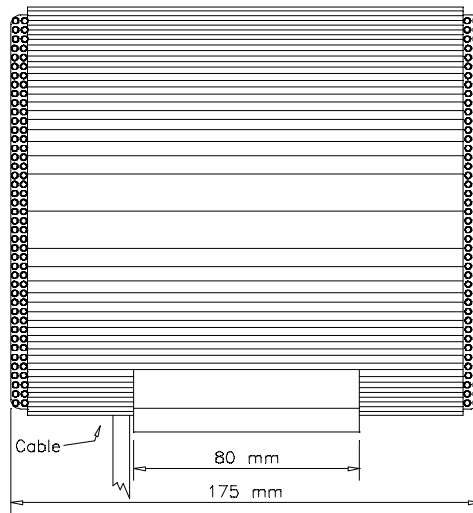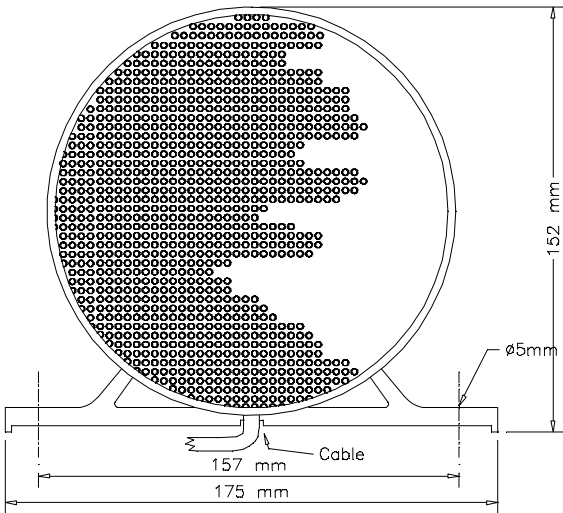

Primary nominal tapings	
Black : Red	6,0 W
Black : Yellow	3,0 W
Black : Green	1,5 W
Black : Blue	0,5 W

Sound pressure levels at 1W/1m P5/15T

SPL vs Freq



Specifications

Material / Color	Aluminum / RAL9010 or anodized
Mounting	Foot bracket
Termination	Cable, 1 m
Weight w/transformer	1,9 kg
IP-rating	NA
Max. / min. amb. temp	90°C / -40°C
Rated / max. power	6 W / 10 W
SPL 1W/1m	90 dB
SPL rated power	96 dB
Effective freq. range	150 – 20000 Hz
Dispersion (-6dB) 1kHz / 4kHz	150° / 150°
Directivity factor, Q	14,6
Options	Impedances, colors, labels

### Installation, Operation and Maintenance Procedures

- Fasten loudspeaker with two screws through foot bracket.
- Select required tapping and connect with a suitable terminal.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do not open loudspeaker when energized.
- This loudspeaker is supplied with a 2 year warranty against defective workmanship.

DNH reserves the right to alter specifications without notice

